



HEALTH MATE

Serenity

owner's manual for all models



operating instructions for your
Health Mate[®] far infrared sauna

guidelines and helpful tips

Congratulations on your purchase of your Health Mate[®] Far Infrared Sauna. We are confident that you will enjoy the many benefits for years to come.

Carefully read this manual before using your Health Mate[®] Sauna for the first time. We recommend keeping this manual for review and future reference.



health mate®

the leader of infrared wellness since 1979

Welcome to the Health Mate® Family!

As the leading creator of infrared sauna wellness for over 35 years, Health Mate® Far Infrared Sauna continues to provide excellent craftsmanship and innovative technology.

We attribute this growth and success entirely to our customer satisfaction, the recognized health benefits, and the quality of our superior craftsmanship. At Health Mate®, we use only the finest materials combined with state-of-the-art construction and the highest safety standards in the industry.

Within the family of Health Mate collections, enjoy such features as our TECOLOY® patented infrared heaters, Bluetooth and Auxiliary, and additional characteristics designed to treat the needs of one's lifestyle and wellness.

We are so happy to have you here with us and look forward to sharing in your experience as you revitalize with the difference Health Mate® provides: a difference in benefits, quality, and attitude as we support you along your journey through health and wellness!

Happy healing to you and your new mate,

Your Health Mate® Family HM®

Headquarters, California



table of contents

a	Installation and Maintenance:	1. Location, Cleaning & Maintenance	4
		2. Assembly Guide	5
b	Getting Started		12
c	Helpful Tips for Enjoying Your Sauna Sessions		16
d	Safety Precautions for Your Health Mate Sauna		19
e	Troubleshooting Guide		21
f	Optional Accessories:	a. Outdoor Cover	24
g	Limited Warranty		28

The information contained in this manual is subject to change without notice.



a. installation & maintenance

1) choosing a location

In determining a location for your Health Mate Infrared Sauna, there are two important things to keep in mind: First, the sauna should always be placed on a level surface. Second, the sauna must be placed in a dry area.

The installation requirements for your Health Mate Infrared Sauna are as follows:

1. Your Health Mate cabin is intended to be a self-contained and freestanding unit. It must not be built into to any structure.
2. There should be a minimum of 5-inches / 12,5 cm clearance from the wall on all sides of the unit to allow easy access to the main power cord.

Moisture may cause damages to the interior and exterior of the sauna. Basement, attic, garage, playroom, spare bedroom, new extension and garden chalet are just a few of possible locations for your sauna.

If you prefer an outdoor environment, you must use a cover (see page 15) to protect your sauna. Do not place the sauna on a surface that easily gets wet.

Place the sauna on a deck to protect it from moisture on the ground.

healthmatesauna.com

2) cleaning & maintenance

1. Before using your Health Mate Infrared Sauna for the first time, clean the inside of the sauna with a damp cloth. When cleaning the exterior, use a natural furniture polish.
2. We recommend turning the sauna on for the maximum time and temperature in order to burn off any factory dust prior to using the sauna for the first time.
3. Scratches and stains on the inside of the sauna can be removed by simply using a fine grade sandpaper over the damaged area.
4. A customized Health Mate Sauna Cover is available as an accessory for all models. Use of this protective storage cover will not only preserve the natural beauty of the sauna, but will also help in maintaining years of continuous enjoyment.
5. We recommend applying a heavy furniture polish to the outside of the sauna before putting the (optional) cover on. Use of a polish will create a barrier for better protection.



a. installation & maintenance

3) assembly guide

Assembly of the sauna requires 2 adults to complete. Please read the instructions thoroughly before and during assembly to ensure proper installation of the unit. If you encounter any problems or have questions during the assembly, please feel free to call for Technical Support: (714)739-6600.

step 1: bottom and back panel

1. Turn the bottom panel upside-down and install the feet. Turn the bottom panel back over and place it in position where the sauna will be assembled.
2. Push the female end of the main power cord up through the square hole in the left rear corner of the bottom.
3. Place the back panel onto the bottom panel. The metal power supply (with all the sockets) should be just above the floor, close to the opening in the floor where the power cord comes out. Have someone hold the back panel upright so it does not fall over.





a. installation & maintenance

step 2: side panels

1. The side panels are labeled "left" and "right". The left side panel is the panel on the left if you are standing in front of the sauna looking at it.
2. Set one side panel onto the bottom panel, carefully aligning it to the bottom panel and the back panel. Buckle the side panel to the back panel and to the bottom panel.
3. Set the other side panel onto the bottom panel and buckle it to the back panel and the bottom panel.





a. installation & maintenance

step 3: bench heater

1. Insert the bench heater panel into the wooden brackets on the side panels.



2. Plug the cable coming out of the bench heater into any of the 4 "HEATER" sockets on the power supply] mounted in the back panel.

3. Plug the unmarked cable coming out of the bottom panel into the inlet in the back of the bench heater.





a. installation & maintenance

step 4: floor cables

1. Plug the female end of the main power cord into the "Inlet" socket on the power supply.
2. There are two additional cables that emerge from the bottom panel at the square hole in the back. The thin cable with the round metal plug connects to the "DATA" socket on the power supply. The plug and socket are "keyed", so that there is only one way to plug this connector in. Rotate the locking ring clockwise until the plug is tightly locked in place.
3. Plug the thick cable marked "HEATER" coming out of the bottom panel into any of the four "HEATER" sockets on the face of the power supply.
4. Set the bench panel onto the bench heater panel and slide it all the way back until it butts up against the back wall and rests on the wooden support.







a. installation & maintenance

step 5: front panel

1. When handling the front panel, hold the door so that it doesn't accidentally swing open and hit against the ground and possibly shatter the window. Set the front panel onto the bottom panel and buckle it to the side panels.
2. There are two cables that emerge from the square opening in the bottom panel at the front. Plug the connectors from these cables into the "DATA" and "HEATER" sockets at the bottom of the front panel, being careful to match the shape of each plug to the shape of the socket. Examine the shape of the 3-wire heater plug very carefully, noting that one side of the plug has two slightly rounded edges. The "HEATER" socket on the front panel also has one side with two slightly rounded edges.

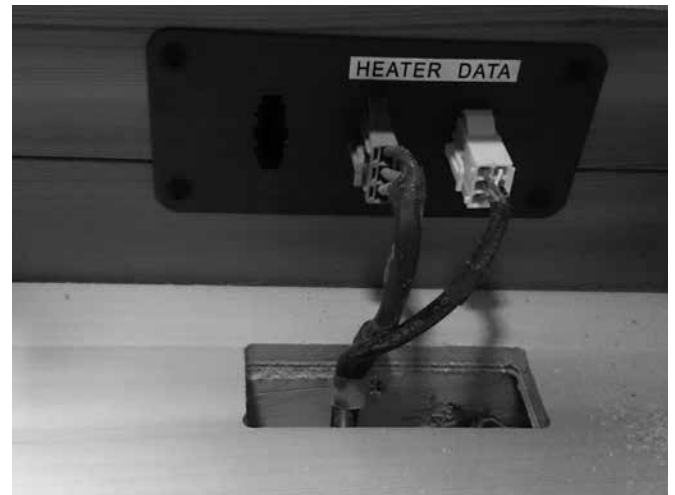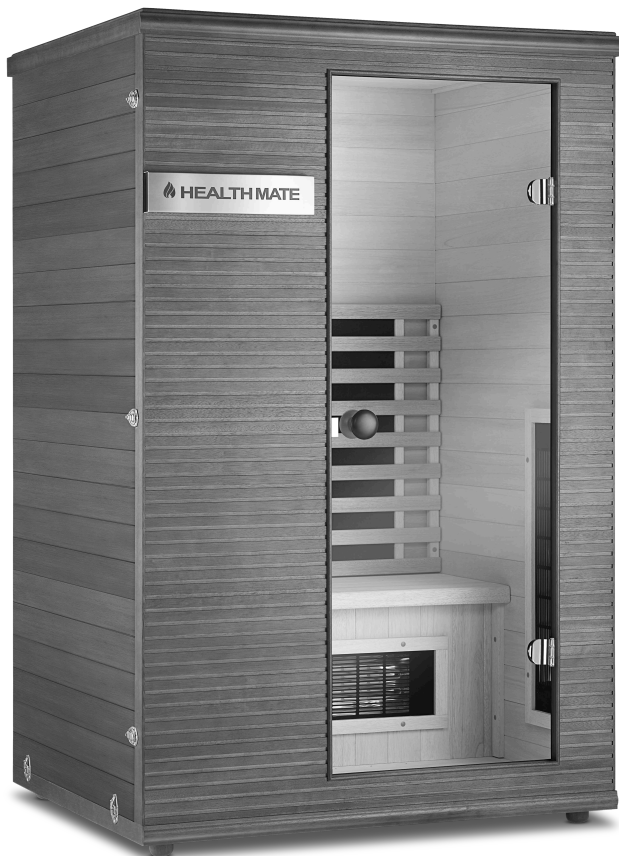


3. Put the magnetic wooden cover over the connection.



a. installation & maintenance

step 6: top panel

1. Set the top panel onto the sauna.
2. There is a cable emerging from the small square opening at the back of the top panel. Plug the "LAMP" cable into the open socket on the back panel. ***It is possible to plug the connection in upside down.** Make sure the shape of the plugs are aligned with the shape of the sockets.

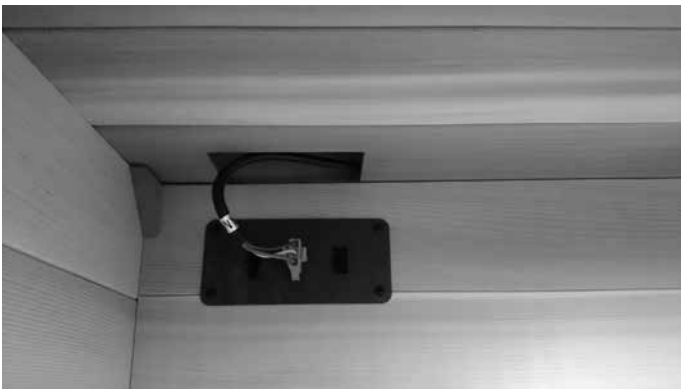

3. Put the other magnetic wooden cover over the connections.

4. Attach the door handle to the door by threading the bolt through the hole in the door. Making sure that the raw wood half of the handle is attached on the "inside" of the sauna, connect the two halves by twisting them together until snug.





a. installation & maintenance

your installation is complete

The installation of your new sauna is now complete! Using a damp cloth, wipe out the sauna to remove any excess sawdust that may have settled on the wall, heaters, or floor.



Completed two person
Serenity Sauna



Completed three person
Serenity Sauna




b. getting started

1) preparing for your first infrared sauna home experience

1. Review all health and safety instructions. If in doubt as to the advisability of using your infrared sauna, consult with your physician.

It is very aromatic and adds to the enjoyment of your sauna session. If the fragrance of the fresh wood is too strong during the first few months of usage, first wipe the wood with a damp cloth to minimize the aroma.

2) digital control panel

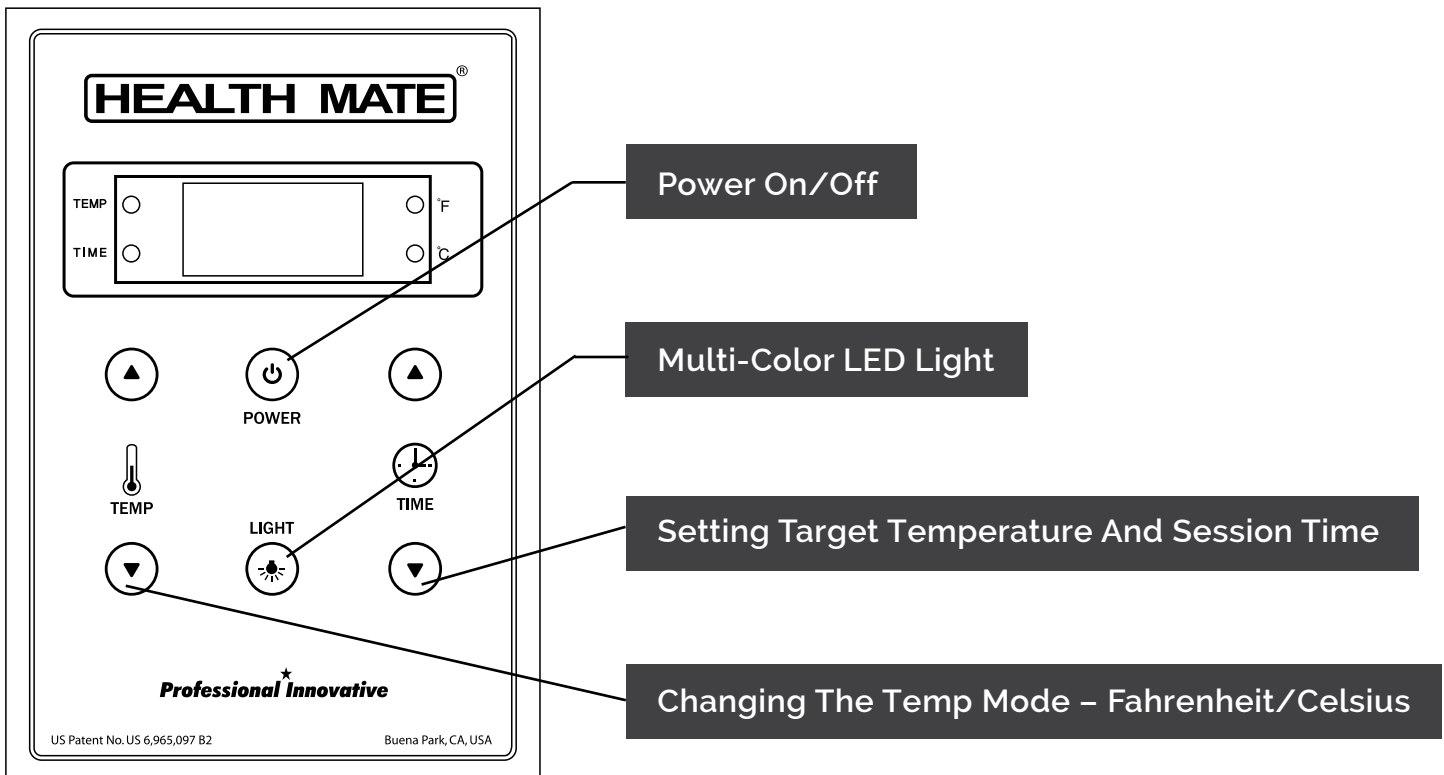



b. getting started

3) power on/off

Touch and hold the Power key for two seconds to turn the controller on or off.

4) multi-color LED light

Touch the Light key at any time to turn the inside light on or off, regardless of whether the sauna is turned on.



multi color led light remote controller operating instructions

1. Press the **On** button **to turn on** your color light. The starting light color is White.
2. Press the **Off** button **to turn off** your color light.
3. When the color light is on, press the **Manual** button to **change the colors** of your color light manually.
4. When the color light is on, press the **Auto** button to **change the colors automatically** in sequence.
5. Press the - and + button to **change the brightness of your color light**.

Color Sequence: White > Red > Yellow > Orange > Green > Cyan > Blue > Purple > Pink

For more information on the color light in your Health Mate, please visit: healthmatesauna.com

5) setting target temperature and session time

When the sauna is turned on, press the TEMP or TIME up or down keys to adjust the target temperature or session time. The last TEMP or TIME adjustment made before the sauna turns off will be the new default setting the next time the sauna is turned on.



b. getting started

6) changing the temp mode - fahrenheit/celcius

When the sauna is on, the TEMP mode LED will be displayed as F (Fahrenheit) or C (Celsius).

To change the TEMP mode, touch the TEMP UP and TEMP DOWN keys at the same time and hold both keys for 3 seconds until the display shows "F-C". Then touch either the TEMP UP or TEMP DOWN key to change to F or C. Then touch and hold the TEMP UP and DOWN keys at the same time. The display will now show "OST".

Touch the TEMP UP or DOWN keys to set the correct OST value- (Fahrenheit: 20) or (Celsius: 15). Then press both keys at the same time once more until the display shows "---". The controller will now change to its normal display mode. Touch and hold the POWER key until the controller turns off. The controller is now properly set for Fahrenheit or Celsius.

7) lock function

The controller has a secret LOCK function, designed to prevent unauthorized use, or to prevent changing the sauna settings or turning the sauna off once it is turned on. The LOCK function can be enabled while the sauna is either turned on or turned off.

To enable the LOCK function, touch the TIME UP key and the TEMP DOWN key at the same time, and hold both keys for several seconds until you hear a "beep". The LOCK function is now enabled. To cancel the LOCK function, again press and hold the TIME UP and TEMP DOWN keys at the same time for several seconds until you hear the beep.

If the LOCK function is enabled when the sauna is turned off, touching the POWER key will cause the display to show "LOC" and will not turn on.

If the LOCK function is enabled after the sauna is turned on, pressing any key will cause the display to show "LOC" and the key function will not operate. This includes the POWER key, so the sauna will NOT turn off until the session time is over or the LOCK function is cancelled.

Please read the next pages carefully, to learn more about the operation of your Health Mate sauna.



Controller is touch sensor type so please do not press the controller too hard!

8) powering up your health mate sauna

Plug in the power cord to the electrical outlet. All lights on LED Control Panel will flash once.



b. getting started

g) error codes

EO EO: Temperature Sensor Disconnected.

ES ES: Temperature Sensor Short Circuit.

IN CASE OF AN EO OR ES ERROR CODE, PLEASE CONTACT CUSTOMER SERVICE FOR FURTHER ASSISTANCE*

OHT OHT: Inside Sauna Temperature is over the limit (180°F/82°C).

OHR OHR: Inside of Controller is overheated (180°F/82°C).

OHT and OHR error will be resolved automatically. During OHT and OHR error, your sauna will automatically shutdown and go into a cooldown period.

(*) Contact Information for Customer Service :

- Toll Free Phone No. in the U.S.A. : _____ (800) 946-6001
- Telephone No. : _____ (714) 739-6600
- Fax No. : _____ (714) 739-6605
- Email : _____ support@healthmatesauna.com

10) connecting to bluetooth

a) Turn the sauna on.

b) To Use the AUX Audio System:

Connect one end of the included AUX cable to the desired mobile device.

Connect the other end of the cable to the sauna's AUX jack, located on the back wall of the sauna's interior.

Play the music or audio file within the mobile device. Volume control is adjusted by using the volume control of the mobile device.

c) To Use the Bluetooth Audio System:

Open the Bluetooth menu on a mobile device that is equipped with a Bluetooth function.

Search for new devices in the device's Bluetooth menu. Select "SW468-SL" in the retrieved list and pair with it. Play the music or audio file within the mobile device. Volume control is adjusted by using the volume control of the mobile device.

**Please Note: When the AUX cable is connected to the mobile device, Bluetooth will automatically disconnect.*



c. helpful tips for enjoying your sauna sessions

Your Health Mate Infrared Sauna is equipped with special infrared heaters. Infrared heat waves reach the body directly without having to heat the intervening air inside the sauna.

With this system, breathing is more comfortable and the atmosphere inside the sauna is more enjoyable than in conventional saunas. Because the infrared heat energy is warming the body directly (and not the air, walls, and fixtures within the sauna), lower temperature settings can be used to achieve results in short sessions starting from 20 to 30 minutes.

1) preparing for your infrared session

1. **Review all health and safety instructions.** If in doubt as to the advisability of using your infrared sauna, consult with your physician.
2. The interior of the Health Mate Infrared Sauna is made of the finest wood. It is very aromatic and adds to the enjoyment of your sauna session. If the fragrance of the fresh wood is too strong during the first few months of use, first wipe the wood with a damp cloth to minimize the aroma.
3. Always **drink plenty of water**, before, during and after a session. Doing so will replenish fluids lost during perspiration.
4. Do not eat anything at least an hour before your sauna session. It is better to **go in the sauna on an empty stomach**. You are more likely to feel uncomfortable sitting in a sauna with a full stomach.
5. **Choosing to take a hot shower or bath prior to the sauna session will further promote perspiration.** However, dry off thoroughly before going into the sauna because excessive water will leave stains and might warp the wood.
6. **Provide at least 2-3 towels.** One towel folded over several times for added cushioning on the bench. Another towel on the floor to absorb extra sweat. And a third towel to wipe off sweat.
7. **Start up your sauna and select the desired session temperature and time** using the control panel (see page 6 and next page).
8. **Allow approximately 15 to 20 minutes for the sauna to warm up** before beginning a session (warm up time is subject to the air temperature and is different for each model).

Please Note: Your sauna's maximum temperature setting may not be achieved based on variations in ambient room temperature, air flow, placement of sauna, etc. If you are experiencing unusual warm-up times or if you have recently moved your sauna from one location to another, please call our technical support team for thermostat calibration help.





c. helpful tips for enjoying your sauna sessions

2) setting session time and temperature

Your body will probably need a few weeks to fully adapt to a regular use of your Health Mate sauna.

Here are some average guidelines to set the time and temperature, once you are used to the sessions:

1.  **Time:**
Noticeable results are usually obtained with sessions of at least 30 minutes. For therapeutical use, it is adviced to do sessions of 45 minutes and more.

2.  **Temperature:**
Depending on your condition and personal preferences, session temperature is usually set between 120°F/50°C and 140°F/60°C. If perspiration does not start after 10 to 15 minutes, this usually indicates that the temperature is set too low to obtain good results.

Always make sure you feel comfortable at all times!

When using your Health Mate sauna for the first time:

- Do not do more than three sessions a week during the first four weeks. You can do daily sessions after six weeks, if desired.
- If you do not feel comfortable or relaxed during a session, lower the temperature and/or open the door of the cabin.
- Recommended schedule and settings for starters:

	TIME	TEMPERATURE
week 1	20 min	120°F/50°C
week 2	23 min	120°F/51°C
week 3	26 min	125°F/52°C
week 4	29 min	125°F/53°C
week 5	32 min	130°F/54°C
week 6	35 min	135°F/55°C




c. helpful tips for enjoying your sauna sessions

3) useful information and tips for during your sauna session

1. **Make sure you have a towel on the floor and on the bench of the sauna to absorb perspiration.**

In order to maintain a clean and pleasant atmosphere inside of your sauna, do not leave damp towels on the bench or floor. Remove them immediately after the session is over.

2. Perspiration should begin within 10 to 15 minutes after stepping into the unit.
3. Be sure to **towel off excess** sweat during your session to help the body perspire more freely.
4. When the temperature reaches the level set on the control panel, the heaters will turn off and on periodically in order to maintain the desired temperature level inside of the sauna.
5. The **ceiling vent on the top panel can be opened** at any time **to introduce fresh air** into the sauna.

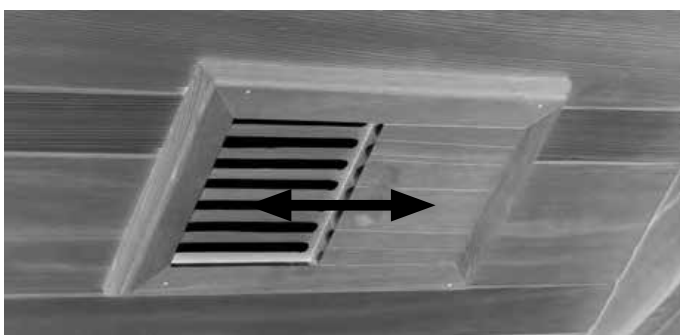

6. **If you feel the need for more cooling, simply leave the door open** until the air around you feels comfortable enough.

7. **Do not put any lotions or oils on the body or face** prior to using the sauna. This may block the pores and hinder perspiration.

8. **Essential oils** can help you to find more tranquility during your session. You can use our ceramic aromatherapy cup (optional accessory) to evaporate your favorite oils.

9. **To make the most out of your sauna session, work your muscles while in the sauna.** Stretch your arms, legs etc. to help relieve sore and tense muscles, massage the affected areas while in the sauna. If you wish to achieve a deep heating effect to a specific area, move it closer to a heater.

10. **Relieve your ankles and feet more effectively, you must elevate them while inside the sauna.**

11. **Shaving your face or legs** with a razor while profusely sweating in a sauna yields an incredibly smooth result without the use of gels or foams.

12. Do not forget to **drink plenty of water**, before, during and after a session to replenish lost fluids through perspiration.

13. After the session is over, **do not immediately jump into the shower.** Since your body was heated up during the session, it will continue to sweat even after the heaters are off. **Sit in the sauna with the door open and let your body cool off.**

Once you feel comfortable enough, take a warm (or cool) shower to rinse the perspiration off your body.



d. safety precautions

1) general safety precautions

1. Read Instructions

Carefully read all safety and operating instructions before operating your sauna.

2. Retain these safety and operating instructions for future reference.
3. Do not smoke or light any fire inside your sauna.
4. To reduce the risk of injury, do not allow small children to use the sauna unless they are closely supervised at all times.
5. Do not use the sauna immediately after hard exercise . Wait at least 30 minutes to allow your body to cool down completely.
6. Exercise care when entering or leaving the sauna.
7. Never sleep inside the sauna while the unit is in full operation.
8. Unplug the sauna from the wall outlet before cleaning. Use a damp cloth for cleaning. Do not use liquid cleaners or aerosol cleansers inside the sauna.
9. Do not use this product near water , for example near a bathtub, in a wet basement or near a swimming pool.
10. Do not use attachments that are not recommended by the manufacturer, as they may cause a hazard.
11. The sauna must be placed under an awning or overhang to prevent heavy rain falling directly onto the roof or outdoor cover.
12. Do not stack or store any objects on top of or inside the sauna.

2) medical and health related precautions

1. If you intend to use far infrared therapy for medical reasons, please consult your physician prior to using the sauna.
2. Excessive temperatures have a high potential for causing fetal damage during the early months of pregnancy. Pregnant or possibly pregnant women should consult their physician prior to using the sauna.
3. The use of alcohol, drugs, or medications prior to or during the sauna session may lead to unconsciousness.
4. Persons suffering from obesity or with a medical history of heart disease, low or high blood pressure, circulatory system problems, or dia- betes should consult a physician prior to using the sauna.
5. Persons using medications should consult a physician before using the sauna since some medications may induce drowsiness while others may affect heart rate, blood pressure, and circulation.
6. At the first sign of a cold or flu, increasing your sauna sessions may be beneficial in boosting your immune system and decreasing the reproductive rate of the viruses. Consult your physician for the proper treatment and care for this, before you start using your sauna.

7. Hyperthermia Danger

Prolonged exposure to hot air will induce hyperthermia.

Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6°F/37°C.

While hyperthermia has many health benefits, it is important not to allow your body's core tempera- ture to rise above 103°F/39.4°C. Symptoms of excessive hyperthermia include dizziness, lethargy, drowsiness, and fainting . The effects of excessive hyperthermia may include failure to perceive heat, failure to recognize the need to exit, unawareness of impending hazard, fetal damage in pregnant women, physical inability to exit the sauna, and unconsciousness.



d. safety precautions

3) power supply related precautions

1. **Dry your hands before handling electrical controls.** Never unplug the power cord or adjust the controls with wet hands or when you have wet bare feet. A danger of electrical shock exists.
2. **Your sauna is intended for use with a 3-wire properly grounded power socket.** Do not defeat the safety purpose of the supplied line cord and plug.
3. **This product should be operated only from the type of power source indicated on the marking label.** If you are not sure of the type of power supplied to your home, consult your local power company.
4. Power supply cords should be routed so they are not likely to be walked on or pinched by items placed upon or against them.
5. **For added protection during a thunder storm,** or when it is left unattended and unused for long periods of time, unplug it from the wall outlet.
6. **Do not overload wall outlets and extension cords** as this can result in a risk of fire or electrical shock.
7. **Always unplug this product from the wall outlet before servicing the product.**
8. **Do not remove power supply covers.** No user-serviceable parts are located inside the power supply.
9. **We strongly recommend the use of a GROUND FAULT CIRCUIT INTERRUPTER (GFCI) device** in any potentially wet locations.

2) warranty precautions

1. **When replacement parts are required, be sure to use replacement parts specified by the manufacturer** or have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electrical shock or other hazards and will void the manufacturer's warranty.
2. If the power supply cord becomes damaged, it must immediately be replaced by the manufacturer or its agent or similarly qualified person to avoid hazard.
3. **Altering or tampering of any electrical connections** on the power supply will void the manufacturer's warranty.
4. **Do not attempt any repair without consulting the manufacturer first.** Unauthorized repair attempts will void manufacturer's warranty.
5. Upon completion of any service or repairs to this product by a service technician, ask the service technician to perform safety checks to determine that the product is in proper operating condition.



e. troubleshooting guide

Question	Answer
Control panel is beeping and showing an error message.	<ul style="list-style-type: none">• The temperature sensor inside your control panel housing has been disconnected. Call for instructions.
There is no heat coming from my front heaters.	<ul style="list-style-type: none">• First thing you want to do is check the blue Molex connection inside the sauna. It's located on the bottom right of the sauna if you're sitting on the bench. You want to make sure that is plugged in the correct way. If you notice the 2 outer connections have a round edge to them, and the center one is a complete square. A lot of times, people plug it in the wrong way, because it will still go in, even if it's wrong.• If that doesn't solve the issue, please call Customer Service for assistance.
All other Sound System problems:	<ul style="list-style-type: none">• Unplug the sauna, wait 10 minutes, then plug back in.
What are the electrical requirements for my new sauna?	<ul style="list-style-type: none">• Serenity Two: 120Volt, 15Amp• Serenity Three: 120Volt, 20Amp
My new sauna is completely dead.	<ul style="list-style-type: none">• Make sure the power cord is plugged into the sauna power supply and the other end is plugged into the wall socket.• Try pressing each of the 2 reset buttons on the sauna power supply.• Unplug the sauna and plug something else, such as a lamp or radio, into the wall socket to verify there is power to that socket. If there is no power, check the house circuit breaker for that line.



e. troubleshooting guide

Question	Answer
<p>The controller display is faint or does not display correctly in some other way.</p>	<ul style="list-style-type: none">• Try unplugging the sauna for about 5 minutes, then plug it back in. This should correct any display problems.
<p>The sound system works, but nothing lights up on the controller display. I unplugged the sauna for 5 minutes but it didn't help.</p>	<ul style="list-style-type: none">• Check to see that the data cable is plugged in at both ends- the round metal connector plugs into the "DATA" port on the power supply. The white plastic plug connects to the "DATA" socket on the front panel just above the floor.
<p>The sound system doesn't turn on.</p>	<ul style="list-style-type: none">• Check to make sure the EXT plug is correctly plugged into the EXT socket on the back wall just below the ceiling. Look at the shape of the plug very carefully to make sure it conforms to the shape of the holes in the socket. There is only one correct way to plug it in, even though it is usually possible to plug it in wrong way.• Check to make sure the EXT plug is plugged tightly into the EXT socket on the power supply under the bench.• If the problem persists, please contact customer service.
<p>The LED light panel in the ceiling turns on white, but none of the buttons on the remote control work.</p>	<ul style="list-style-type: none">• Make sure the thin plastic tab is pulled out from the battery holder.• Make sure you are aiming the remote control at the center of the light panel, not at the sauna controller.• Replace the battery in the remote control.



e. troubleshooting guide

Question	Answer
Wrong A.C. Power cord (female end of power cord does not match the male end of cable on sauna)	<ul style="list-style-type: none">• The power cord and the cable in the sauna floor near the power box do not attach or connect to each other. They both plug into the power supply located below the front heater (under a wooden cover).
House circuit breaker is tripping.	<ul style="list-style-type: none">• Check that the amperage of the breaker corresponds with the amperage rating of your sauna. Make sure that the circuit is not overloaded by having too many appliances on one circuit.
Where is the serial number on my new sauna?	<ul style="list-style-type: none">• Look for a manufacturer's label next to the DATA and HEATER sockets at the bottom of the front panel.

Troubleshooting tips are also available at healthmatesauna.com/faqs
Please contact the manufacturer with any other questions regarding customer service or troubleshooting.




f. optional accessories

a) outdoor cover

1. general information

The Health Mate sauna cover is designed to provide your sauna with extra protection against moisture and wind. It allows access to the sauna without having to remove the cover, and it comes with a 5-year limited warranty.

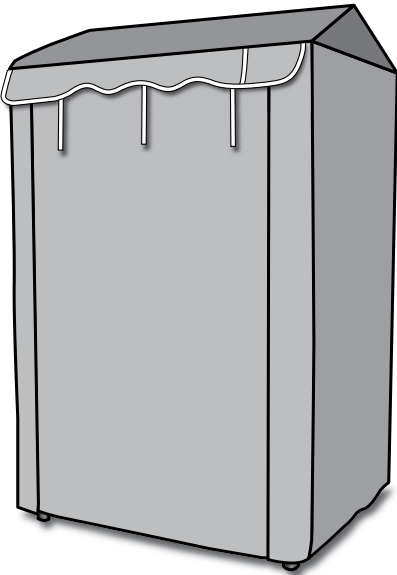

Important:


1. The **roof peak** must always be standing in the form of a letter 'A'.
2. The **sauna must be placed under an awning or overhang** to prevent rain falling directly onto the roof.
3. **Sauna should be placed** on sturdy, dry level ground when outdoors (not grass, gravel, dirt, etc.)
4. The **snap buttons** must be clipped on at all times.
5. The **zippers must be closed** when the sauna is not in use.
6. **Warm up times may vary** based on outdoor temperature.



The warranty on your sauna may become void if the cover is not properly installed or maintained.

Please follow these instructions step by step to install your outdoor cover.


2. check for parts

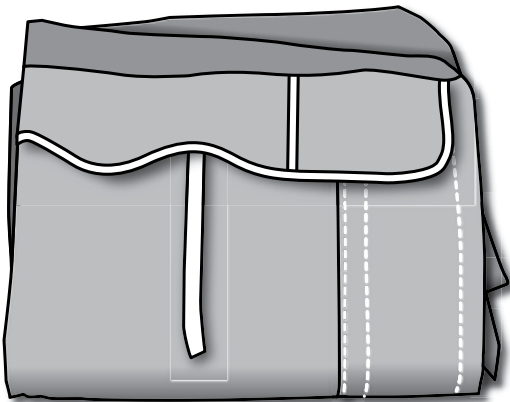

Sauna Cover



Snap-screws

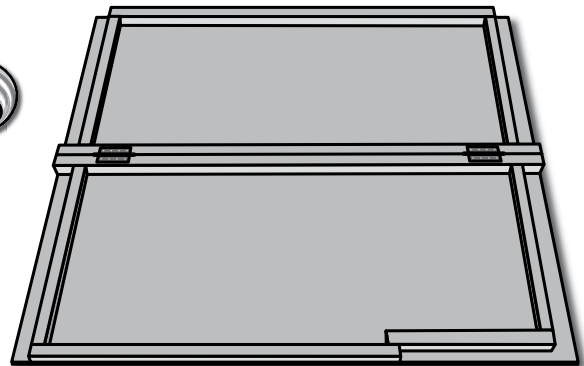

Wooden roof peak


Tools: the only tool you need is a Phillips screwdriver



f. optional accessories

3. place the roof peak and prepare the cover


Carefully place the roof peak on top of the sauna.
The roof peak must form a triangle when you see it from the side of the sauna.

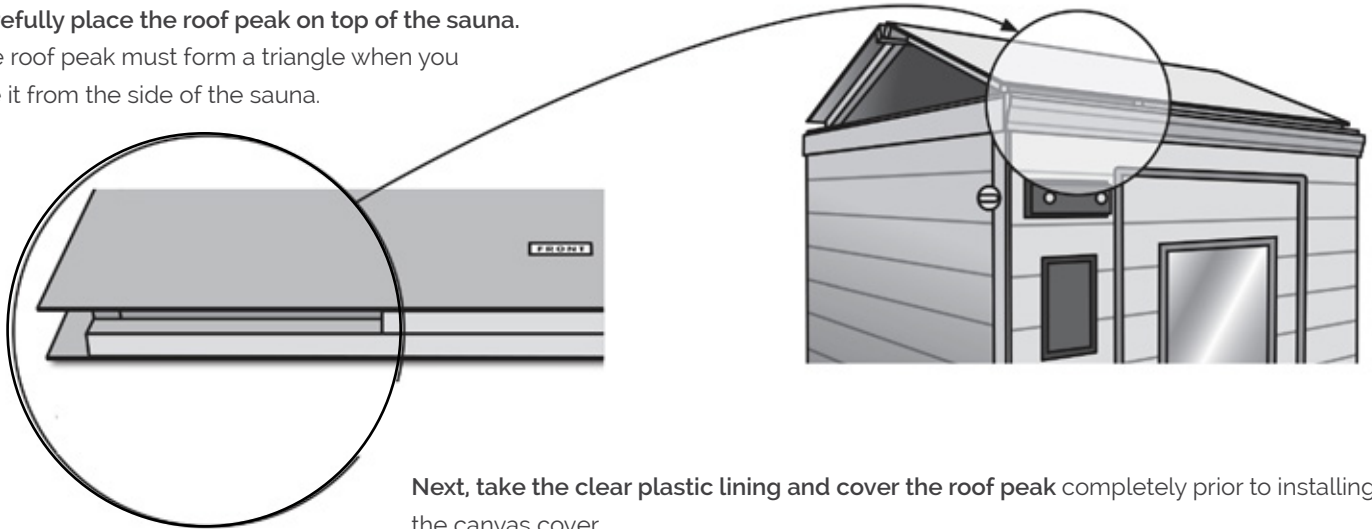

Next, take the clear plastic lining and cover the roof peak completely prior to installing the canvas cover.


Now **unfold the sauna cover and open the zippers** on the front section of the cover.

4. put the cover over the sauna

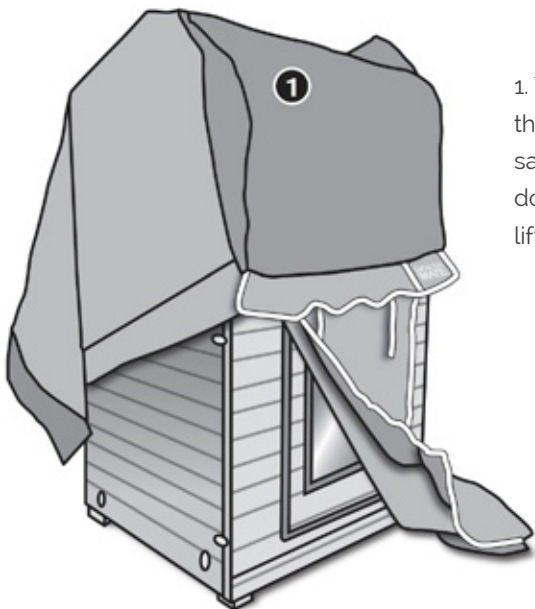

1. Take the back section of the cover and put it over the sauna. Pull the cover slowly down from the back while lifting up the front section.

2. Line up the seams with the edges of the sauna. Close down the zippers.

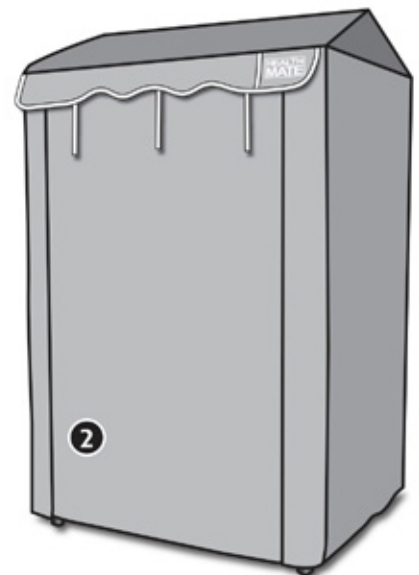





f. optional accessories

5. attach the cover on the sauna

1. Tap hard on the snap buttons at each side of the cover, with the back of your screw driver to leave a mark on the wood.

2. Lift up the cover and screw on the snap-screw at the center of the mark.

Lower down the cover of both sides and snap the buttons on until you hear a click.

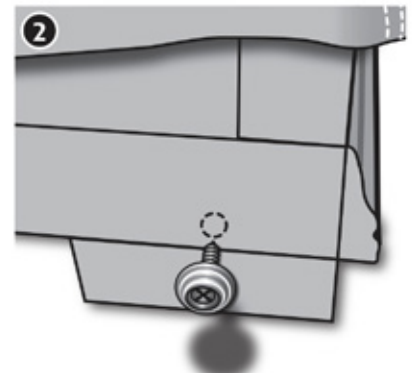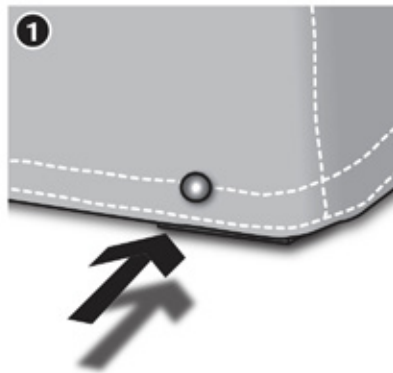



f. optional accessories

b) accessorie

1. aroma mate

Adding just a few drops of essential oils to your Aroma Mate aromatherapy cup will transform your warm space to a calming place. Visit your health food store for non-diluted and non-alcoholic quality essential oils. This accessory does not require any assembly.



2. floor mate

Dimensions (width x depth x height):


Medium – 24 X 18 X 1.25 | Large – 36 X 18 X 1.25

The floormat is designed to be put outside in front of your sauna door. This accessory does not need any assembly.



3. shelf mate

This accessory can be easily assembled with a Phillips screwdriver. The shelf is simply attached on the outside of your sauna, with two metal hooks between the roof and wall top.

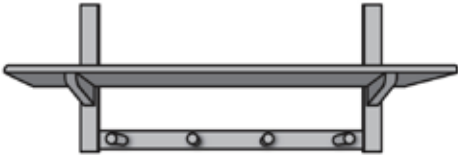



g. limited warranty

Health Mate Infrared Saunas to be free of defects in material and workmanship.

Heaters - Tecoloy	Lifetime*
Heaters - Carbon	5 years
Craftsmanship:	5 years
Electrical Components:	5 years
Audio Components:	1 year

** Lifetime warranty is offered to products sold after July 1, 2004*

This warranty extends only to the original retail purchaser of the sauna and terminates upon transfer of ownership. It does not extend to commercial or institutional use or installation.

Freight charges to and from the customer are the responsibility of the customer. This includes freight charges for parts shipped to enable the services of your sauna.

This warranty is void if the sauna has been subjected to alteration, misuse, abuse, accident, natural disaster or non-factory authorized modification or repair. This warranty is also void if the sauna has been operated or maintained in deviation to the published instructions. The warranty extends only to the manufacturing defects and does not cover any damages resulting from mishandling of the product by the owner. This warranty does not cover any normal wear and tear due to usage. This warranty also does not cover any damages caused by natural weather conditions even when the sauna is covered with the factory authorized outside cover. Broken glass and light bulb, whatever the cause, are not covered by this warranty.

Health Mate Sauna shall not be liable for the loss of use of the sauna or other incidental or consequential damages. Under no circumstances shall Health Mate Sauna or any of its representatives be held liable for injury to any person or damages to any properties. Some states allow limitations on how long specified warranty lasts. Some states do not allow exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. Specifications are subject to change without notice. state to state. Specifications are subject to change without notice.



g. limited warranty

For your record, please complete the following information.
You will need to refer to this information when calling customer service:

Date of Purchase: _____ Date of Delivery: _____

Model Number: _____ Serial Number: _____

Dealer Information (Name & Telephone): _____

Where is the serial number on my new sauna? Look for a manufacturer's label next to the DATA and HEATER sockets at the bottom of the front panel.

contact information for customer service

Address: 1329 Gateway Drive, Gallatin, TN 37066

Fax #: 714.739.6605

Toll Free #: 800.946.6001

Email: support@healthmatesauna.com

healthmatesauna.com



HEALTH MATE

800.946.6001 | healthmatesauna.com